

## GB AWO/D 4342S

## PROGRAMME CHART




**A. "Door open" indication**

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

**B. "Service" indication**

**C. "Water tap closed" indication**

**D. "Clean pump" indication**

 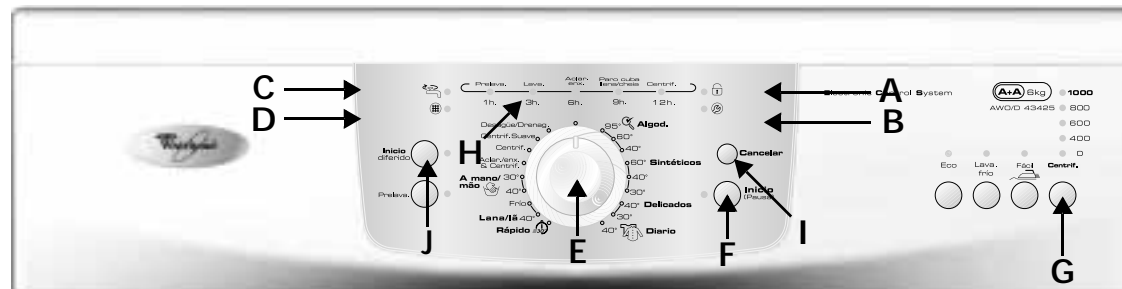


**E. Programme selector**

**F. "Start/Pause" button**

**G. Spin speed selector**







 
 


 









 



 

**H. Programme sequence indicator**



and Start delay indicators

**I. "Reset" button**

**J. "Start delay" button**

Programme		Care Labels	Max Load  kg	Type of wash/Notes  <i>- For temperature selection, respect the manufacturer's recommendations on the care label</i>	Detergents and additives			Special options						Max Spin Speed  rpm
					Pre-wash 	Main Wash 	Softener 	Start delay Inicio diferido	Pre-wash Prelava.	Eco Eco	Cold wash Lava. frio	Easy ironing Fácil 	Variable spin Centrif.	
Cotton / Antibacterial 60 - 95 °C	 Algod. 60 - 95 °C	 	6.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. With heavily soiled laundry the additional “Prewash” option can be selected as well. Selecting “Cotton 95”, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	*	Yes	*	*	*	*	*	*	*	1000
Cotton 40 °C	Algod. 40 °C		5.0											
Synthetics 30 - 40 - 60 °C	Sintéticos 30 - 40 - 60 °C	   	2.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes	*	*	*	*	*	*	*	800 <sup>1)</sup>
Delicates 30 - 40 °C	Delicados 30 - 40 °C	 	1.5	Curtains and delicate clothing, dresses skirts, shirts and blouses.	*	Yes	*	*	*	—	*	—	*	800 <sup>1)</sup>
Daily load 40 °C	 Diario 40 °C	   	3.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	*	*	—	—	*	*	*	1000
Quick wash 30 °C	Rápido  30 °C		3.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	—	Yes	*	*	—	—	*	—	*	1000
Wool Cold - 40 °C	Lana/lã frio - 40 °C		1.0	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	—	Yes	*	*	—	—	*	—	*	800 <sup>1)</sup>
Handwash 30 - 40 °C	A mano/mão  30 - 40 °C	  	1.0	Textiles made of linen, silk, wool and viscose marked as “handwashable”.	—	Yes	*	*	—	—	*	—	*	400 <sup>2)</sup>
Rinse & Spin	Aclar./enx. & Centrif.	—	6.0	Same as the last rinse and the final spin in the “Cotton” programme.	—	—	*	*	—	—	—	—	*	1000
Spin	Centrif.	—	6.0	In this programme spinning is intensive. Same as the spin cycle in the “Cotton” programme.	—	—	—	*	—	—	—	—	*	1000
Gentle Spin	Centrif. Suave	—	1.0	In this programme spinning is gentle. Same as the spin cycle in the “Wool” programme.	—	—	—	*	—	—	—	—	*	800 <sup>1)</sup>
Drain	Desagüe / Drenag.	—	—	Water is drained only without any spinning.	—	—	—	—	—	—	—	—	—	—

\*: optional / Yes : dosing required

<sup>1)</sup> For improved garment care, spin speed is restricted to 800 rpm in this programme.

<sup>2)</sup> For improved garment care, spin speed is restricted to 400 rpm in this programme.

Whirlpool is a registered trademark of Whirlpool USA

5019 301 05874



## CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton / Antibacterial	95	6.0	59**	1.90	2:00
Cotton	60	6.0	49	1.14	2:10
Cotton with "Eco"***	60	6.0	49	1.02	2:20
Cotton	40	5.0	56	0.70	2:00
Synthetics	60	2.5	50**	0.80	1:35
Synthetics	40	2.5	46	0.50	1:20
Delicates	30	1.5	60	0.50	0:45
Daily load	40	3.0	41	0.50	1:00
Quick wash	30	3.0	41	0.40	0:30
Wool	40	1.0	60	0.50	0:45
Handwash	40	1.0	45	0.50	0:40

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The remaining time indicator can deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\* Reference Programme for Energy Label.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

Close the door and turn the programme selector to the desired programme and temperature. The indication lamp next to the "Start/Pause" button flashes.

## SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lights up.

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.

### "Eco" button

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved.

### "Cold wash" button

- Water is heated only up to 20°C.
- Suitable for delicate laundry items with wash temperature recommendation of max. 30° on the care label.
- Selectable only on the lowest temperature step of each programme.

### "Easy ironing" button

- Can be used together with "Cotton", "Synthetics" and "Daily load" programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very gently.

### "Variable spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

## START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options.
- Press the "Start Delay" button to select the delay time by 1, 3, 6, 9 or 12 hours.
- Press the "Start/Pause" button. The indication next to the "Start Delay" button lights up and goes off when the programme starts.
- Once having pressed the "Start/Pause" button, the countdown of the time delay begins. When the programme starts, the start delay indicator light goes off and is replaced by the programme sequence indication.
- After the "Start/Pause" button has been pressed, the number of hours preselected can be reduced by pressing again the "Start Delay" button.

### To cancel the "Start Delay"

#### ..before you press the "Start/Pause" button:

- Turn the programme selector to another position or press the "Reset" button.

#### ..after having pressed the "Start/Pause" button:

- Press the "Reset" button for at least 3 seconds - the start delay indicator light goes out.

## PROGRAMME START

Open the tap and press the "Start/Pause" button. The indication lamp next to the "Start/Pause" button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

When the programme phase is finished, the corresponding indication goes out.

## "DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

## RED INDICATIONS

### "Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your Instructions for Use; if the fault persists, contact our After Sales Service.

### "Water tap closed"

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

### "Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

## PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.

- Turn the programme selector to the "Off/O" position.
- Close the water tap.
- Open the door and unload the machine.
- Leave the door ajar to allow the drum to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

- Press the "Start/Pause" button to pause the programme. The light flashes.
- Select the new programme (with temperature), any options and another spin speed if you want.
- Press the "Start/Pause" button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The "Reset" button cancels a programme before the end.

- Press the "Reset" button for at least 3 seconds. Any existing water is drained out before the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA

5019 301 05874